 


Professional Photographic Equipment


INSTRUCTIONS


W Series Tripod




 
Zhongshan SIRUI Photographic Equipment Industry CO.,Ltd


Address: The Third Industrial District, Wuguishan Town, Zhongshan City, Guangdong, China E-mail: info@sirui-photo.com http://www.sirui-photo.com http://www.zssirui.com Tel: 0086-760-88897373 Fax: 0086-760-88207062 P.C: 528458
Senzice Hoffite: 0086-400-8300299

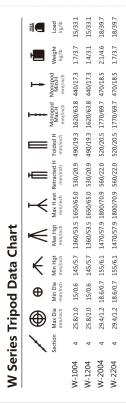


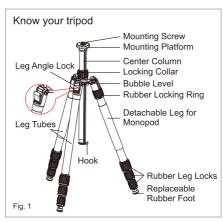


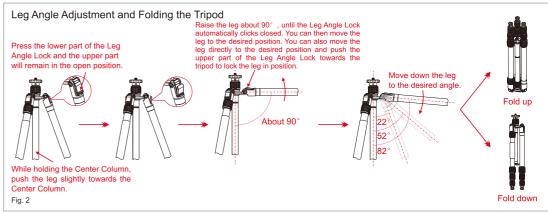



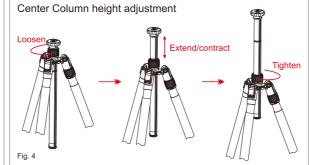

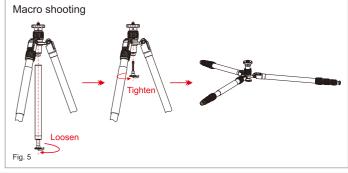

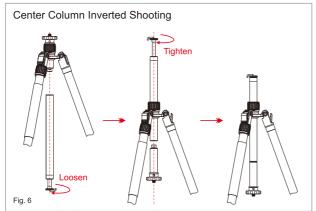



1. Know your tripod. (Fig. 1)

2. Leg Angle Adjustment and Folding the Tripod

As shown in Fig. 2, the tripod legs can be adjusted to 3 different angles (22° , 52° , 82°). When the leg is raised to 90° , the Leg Angle Lock closes automatically. The tripod can be closed by folding the legs up 180° (more compact) or down.

3. Leg Extension and Closing

As shown in Fig. 3, twist the rubber leg locks about ½ turn in a clockwise direction, adjust the legs to the desired length and tighten the rubber leg locks by turning them

in a counter-clockwise direction. Tighten the legs from biggest to smallest tube. Loosen the legs from smallest to biggest tube. For fast setup, grip all leg locks in your right hand, twist $\frac{1}{2}$ turn in a clockwise direction and allow the legs to smoothly open by themselves. Then tighten as indicated.

4. Function of Center Column, transforming a tripod into a monopod

 
The Center Column can be moved up and down, used for Micro shooting and inverting shooting, it can also be connected to the monopod for increasing the height (as Fig. 4-7).



Professional Photographic Equipment

INSTRUCTIONS

W Series Tripod

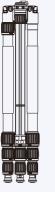



www.sirui-photo.com / www.zssirui.com

Address: The Third Industrial District, Wuguishan Town, Zhongshan City, Guangdong, China
Tel: 0086-760-88897373
Fax: 0086-760-88207062
P.C: 528458
Third@Strui-Photo.com
http://www.zasirui.com
Service Hotline: 0086-400-8302299

Zhongshan SIRUI Photographic Equipment Industry CO., Ltd



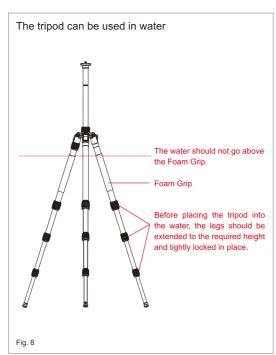

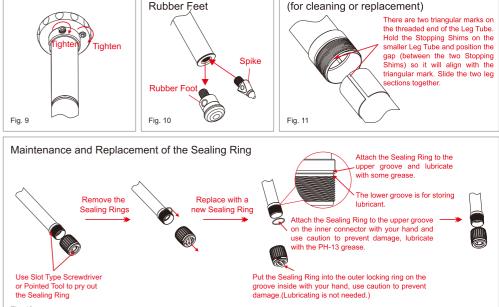

Exchanging Spikes or

5. The Tripod can be used in the water

The tripod can be used in the water without water getting inside the tripod legs. Extend the tripod legs to the required length, lock the legs securely and set up in the water. The height of water cannot reach above the foam grip (as shown in Fig. 8). Before closing the tripod legs, dry the leg sections. If you are in salt water, silt or dirty water, wash the legs with mild soap and warm water to remove all of the salt or impurities. Dry well before closing.

6. Final Locking (As shown in Fig. 9)

7. Exchange feet (Spike / Rubber Feet). (Exchange as shown in Fig. 10)

8. Hook

At the bottom of the Center Column is a Hook that allows you to hang additional weight (sand bag, camera bag, etc.) under the tripod for added stability.

9. Maintenance of Tripod

W Series Tripods are easy to assemble, and convenient to clean and maintain.

- ① The Stopping Shims can be cleaned or replaced. (Assembling for Leg tubes and Stopping Shims as shown in Fig. 11) If the shims become wet or dirty, please remove them by unscrewing the leg locks and dry them to prevent damage to the shims. If the shims are damaged, please replace them with new shims.
- ② The Sealing Ring can be cleaned or replaced (Maintenance and Replacement as shown in Fig. 12)

Note: The Stopping Shims, Sealing Rings or other parts can be purchased separately.

Attention:

Final Locking

Do not exceed the recommended load limit of the head and/or tripod. (Please refer to product specifications).

Assembling Leg Tubes and Stopping Shims

A Please make sure that the locks are securely tightened when in use.

This product should not be used in environments that exceed the following conditions (-40 \sim +100 $^{\circ}$ C/-40 \sim 212 $^{\circ}$ F). After use in water, mud, sand or dusty environments, please clean and dry thoroughly before storing.

* Please keep from high temperatures and direct exposure to bright sunlight for extended periods of time.

★ Please do not leave the equipment alone in a public place, which can be an inconvenience or hazard to others.

To protect your camera gear, please remove it from the tripod/ball head when transporting from place to place.

Please use a soft towel with mild soap to clean the locking system and gliding parts, when necessary.

Under most situations, there is no need to lubricate any parts of this product. The addition of most lubricants will gum up the mechanisms and reduce their normal gliding characteristics. Please call or email us if you have any questions or special needs.

Please keep this product away from all electrical power sources.



CAUTION

Please remove the camera from the tripod when changing the position of the tripod. Do not place the tripod, with camera attached, over your shoulder or carry the tripod horizontally by the legs. Strong shaking may cause damage of the screw in the mounting plate and/or the camera. Please extend the legs from the biggest tube to smallest tube; close the legs from the smallest tube to biggest tube, to avoid leg joint bushing damage.

Specifications are subject to change without notice.